



Product Name: Diablo 2.5 Cable Tie-Back SRL-LE

Part #: 11108; 11109

Instruction Manual

Do not throw away these instructions! Read and understand these instructions before using equipment!

Introduction	1
Applicable Safety Standards	1
Worker Classifications	1
Product Specific Applications	2
Limitations	2 - 3
Components and Specifications	4
Installation and Use	4 - 6
Maintenance, Cleaning, and Storage $_$ $_$ $_$ $_$ $_$ $_$ $_$ $_$ $_$ $_$	7
Inspection	8
Inspection Log	9
Safety Information	10
Labels	11



Introduction

Thank you for purchasing a Guardian Fall Protection Diablo 2.5 Cable Tie-Back SRL-LE. This manual must be read and understood in its entirety, and used as part of an employee training program as required by OSHA or any applicable state agency.

This and any other included instructions must be made available to the user of the equipment. The user must understand how to safely and effectively use the Diablo 2.5 Cable Tie-Back SRL-LE, and all fall safety equipment used in combination with the Diablo 2.5 Cable Tie-Back SRL-LE.

User Information					
Date of First Use: Serial #: Trainer: User:					

Applicable Safety Standards

When used according to instruction specifications, this product meets or exceeds all applicable OSHA 1926 Subpart M and OSHA 1910 standards for fall protection. Applicable standards and regulations depend on the type of work being done, and also might include state-specific regulations. Consult regulatory agencies for more information on fall protection systems and associated components.

Worker Classifications

CAUTION

Understand the following definitions of those who work near or who may be exposed to fall hazards.

Qualified Person: A person with an accredited degree or certification, and with extensive experience or sufficient professional standing, who is considered proficient in planning and reviewing the conformity of fall protection and rescue systems.

Competent Person: A highly trained and experienced person who is ASSIGNED BY THE EMPLOYER to be responsible for all elements of a fall safety program, including, but not limited to, its regulation, management, and application. A person who is proficient in identifying existing and predictable fall hazards, and who has the authority to stop work in order to eliminate hazards.

Authorized Person: A person who is assigned by their employer to work around or be subject to potential or existing fall hazards.

It is the responsibility of a Qualified or Competent person to supervise the job site and ensure all applicable safety regulations are complied with.



Product Specific Applications

Use of equipment in unintended applications may result in serious WARNING injury or death. Maximum 1 attachment per connection point.

Personal Fall Arrest: Diablo 2.5 Cable Tie-Back SRL-LEs may be used in Personal Fall Arrest applications as a component of a MAXIMUM 1 Personal Fall Arrest System (PFAS). Structure must withstand loads applied in the directions permitted by the system of at least 5,000 lbs. Applicable D-ring: Dorsal.

- Free fall, LE Use: Maximum 5'.
- Free fall, non-LE Use: Maximum 2'.



Restraint: Diablo 2.5 Cable Tie-Back SRL-LEs may be used in Restraint applications. Restraint systems prevent workers from reaching the leading edge of a fall hazard. Always account for fully deployed length of lanyard/SRL. Structure must withstand loads applied in the directions permitted by the system of at least 1.000 lbs. No free fall is permitted. Restraint systems may only be used on surfaces with slopes up to 4/12 (vertical/horizontal). Applicable D-rings: Dorsal. Chest, Side, Shoulder.

For all applications, worker weight capacity range (including all clothing, tools, and equipment):

LE Use: 130-310 lbs. Non-LE Use: 130-420 lbs.

Limitations


Fall Clearance: There must be sufficient clearance below the anchorage connector to arrest a fall before the user strikes the ground or an obstruction. When calculating fall clearance, account for a MINIMUM 2' safety factor, deceleration distance, user height, length of lanyard/SRL, harness stretch, and all other applicable factors.

Diagram shown is an example fall clearance calculation ONLY.

Swing Falls: Prior to installation or use, make considerations for eliminating or minimizing all swing fall hazards. Swing falls occur when the anchor is not directly above the location where a fall occurs. Always work as close to in line with the anchor point as possible. Swing falls significantly increase the likelihood of serious injury or death in the event of a fall.

Diablo 2 5 Cable Tie-Back SRI-LE recommended fall clearance (does not factor in any potential swing fall hazards). Clearance numbers specified based on lifeline installed vertically overhead and in-line with worker:

• LE Use: 13'-17'

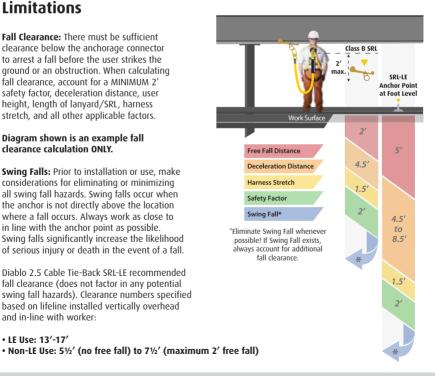



Compatibility: When making connections with Diablo 2.5 Cable Tie-Back SRL-LE, eliminate all possibility of roll-out. Roll-out occurs when interference between a hook and the attachment point causes the hook gate to unintentionally open and release. All connections must be selected and deemed compatible with Diablo Cable Tie-Back SRL-LE by a Competent Person. All connector gates must be self-closing and self-locking, and withstand minimum loads of 3,600 lbs. See the following for examples of compatible/incompatible connections:

Connector closed and locked to D-ring. OK.

 
Two connectors to same D-ring. NO.

Incompatible or irregular application. which may increase risk of roll-out. NO.

Two or more snap hooks or carabiners connected to each other. NO.









Connector to integral lanyard. NO.




Connector directly to webbing. NO.

Connector directly to horizontal lifeline. NO.





Components and Specifications

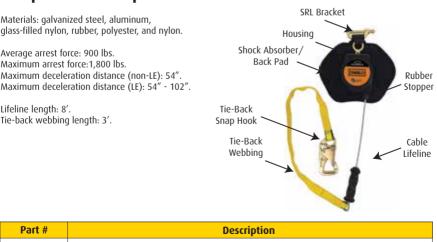

Part #	Description
11108	Diablo 2.5 Cable Tie-Back SRL-LE w/Steel Snap Hook End. Single Leg.
11109	Diablo 2.5 Cable Tie-Back SRL-LE w/Steel Snap Hook Ends. Dual Leg Kit.



Installation and Use

1. All PFAS components must be selected and deemed compatible with Diablo 2.5 Cable Tie-Back SRL-LE by Competent Person.

2. Ensure structure to which Diablo 2.5 Cable Tie-Back SRL-LE is to be attached, and on which work is to be performed, is free of all hazards, including, but not limited to, debris, rot, rust, sharp or abrasive edges and surfaces, and hazardous materials.

3. Eliminate or minimize all risk of swing fall hazard.

4. Ensure 100% tie-off will be maintained at all times, which may require the use of a back-up or supplementary fall protection system.

5. Always minimize lifeline contact with sharp or abrasive edges and surfaces.

6. For Dual-Leg Kit, only work with one leg attached, except when transitioning between anchor points. When transitioning between anchor points, first connect second leg to applicable anchor point, then disconnect other leg from previous anchor point prior to beginning any work. Always ensure 100% tie-off is maintained.

7. Diablo 2.5 Cable Tie-Back SRL-LE may be used in either tie-back or standard applications. Adhere to the applicable method of installation and use.




In tie-back applications, snap hook must ONLY be attached to tie-back webbing. NEVER attach snap hook to cable lifeline.



Always use Diablo 2.5 Cable Tie-Back SRL-LE in combination with anchor point that eliminates as much slack in lifeline as possible. Competent Person must ensure that anchor point location will not introduce potential free fall greater than what is permitted by the system.

To install Diablo 2.5 Cable Tie-Back SRL-LE to harness:

1. Compress and hold both release buttons on SRL Bracket and slide pin to open position. Do not attempt to open or otherwise modify bracket that is connected to Diablo 2.5 Cable Tie-Back SRL-LE.

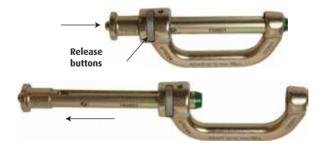




2. At web loop immediately beneath harness dorsal D-ring, slide SRL Bracket pin through loop and lock closed. It may be necessary to slightly loosen web loop to accommodate pin. Always re-tighten web loop after install.

Depending on SRL Bracket design, either ensure green indicator IS fully visible, or that red indicator IS NOT visible.

Note: With Diablo 2.5 Cable Tie-Back SRL-LE attached to harness as shown, it is permitted to connect a separate connecting device to the harness dorsal D-ring. However, never work with more than one connecting device attached to an anchorage connector at any time.



 SRL Bracket installed at web loop.



3. Secure Diablo SRL-LE back pad around harness shoulder straps with provided hook and loop fastener straps as shown



Diablo SRL-LE back pad hook and loop fastener straps secured around harness shoulder straps.



NEVER attach snap

hook to cable lifeline.

Tie-Back:

A) Attach Diablo 2.5 Cable Tie-Back SRL-LE to harness.

B) Wrap Diablo 2.5 Cable Tie-Back SRL-LE tie-back webbing around selected structural anchor. Ensure potential free fall does not exceed what is permitted by the system, as determined by Competent Person.

C) Attach snap hook to webbing BELOW rubber stopper. NEVER attach tie-back hook to cable lifeline or anything other than tie-back webbing.

Standard:

A) Attach Diablo 2.5 Cable Tie-Back SRL-LE to harness.

B) Attach snap hook to compatible overhead anchorage connector. Ensure potential free fall does not exceed what is permitted by the system, as determined by Competent Person.

Snap hook attached to

tie-back webbing. OK.

SRL-LE Additional Use Instructions:

WARNING ALWAYS adhere to the following warnings and specifications when using SRL-LEs.

Diablo 2.5 Cable Tie-Back SRL-LEs are tested and certified for horizontal use over a steel edge without burrs. Diablo Cable Tie-Back SRL-LEs may be used over similar surfaces, such as metal sheeting or other steel formations.

The allowable angle of redirection of the lifeline portion of Diablo 2.5 Cable Tie-Back SRL-LEs at the leading edge of a fall hazard MUST be at least 90° (see Image 1).

Anchor point MUST be situated no lower than the leading edge of applicable fall hazard(s).

Prior to use, a Competent Person MUST calculate adequate fall clearance (see pg. 3).

ALWAYS attach to anchorage connector that will allow for required setback distance (see Image 2).



Setback distance: As determined by product testing, Guardian Fall Protection Diablo 2.5 Cable Tie-Back SRL-LEs are not required to be setback any specific distance from the leading edge of applicable fall hazard(s).

Diablo 2.5 Cable Tie-Back SRL-LE may be used in combination with horizontal lifelines. All installation, set-up, and use of horizontal lifelines must be done under the supervision of a Qualified Person.

NEVER work on the far side of an opening that is opposite the Diablo 2.5 Cable Tie-Back SRL-LE anchorage point.

In the event of a fall over the edge, special rescue measures may be necessary. Always account for use of Diablo 2.5 Cable Tie-Back SRL-LE in job site rescue plan developed by job site Competent Person.

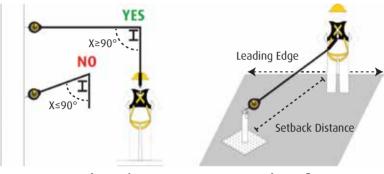


Image 1

Image 2

Maintenance, Cleaning, and Storage

If Diablo 2.5 Cable Tie-Back SRL-LE fails inspection in any way, immediately remove it from service, and contact Guardian to inquire about its return or repair.

Cleaning after use is important for maintaining the safety and longevity of Diablo 2.5 Cable Tie-Back SRL-LE. Remove all dirt, corrosives, and contaminants from Diablo 2.5 Cable Tie-Back SRL-LE before and after each use. If Diablo 2.5 Cable Tie-Back SRL-LE cannot be cleaned with plain water, use mild soap and water, then rinse and wipe dry. NEVER clean Diablo 2.5 Cable Tie-Back SRL-LE with corrosive substances.

When not in use, store equipment where it will not be affected by heat, light, excessive moisture, chemicals, or other degrading elements.



Inspection


Prior to EACH use, inspect Diablo 2.5 Cable Tie-Back SRL-LE for deficiencies, including, but not limited to, corrosion, deformation, pits, burrs, rough surfaces, sharp edges, cracking, rust, paint buildup, excessive heating, alteration, broken stitching, fraying, bird-caging, and missing or illegible labels.

Pay careful attention to cable swage (located beneath rubber stopper) and ensure no damage is present at location where swage contacts lifeline. IMMEDIATELY remove Diablo 2.5 Cable Tie-Back SRL-LE from service if defects or damage are found, or if exposed to forces of fall arrest. Ensure fall arrest indicator (broken stitching at location shown below) is not deployed. During inspection, consider all applications and hazards Diablo 2.5 Cable Tie-Back SRL-LE has been subjected to.

Ensure that applicable work area is free of all damage, including, but not limited to, debris, rot, rust, decay, cracking, and hazardous materials. Ensure that selected work area will support the application-specific minimum loads set forth in this instruction manual. Work area MUST be stable.

At least every 12 months, a Competent Person other than the user must inspect Diablo 2.5 Cable Tie-Back SRL-LE. Competent Person inspections MUST be recorded in inspection log in instruction manual and on equipment inspection grid label. The Competent Person must sign their initials in the box corresponding to the month and year the inspection took place.

Immediately remove from service if indicator stitching shows any signs of damage:

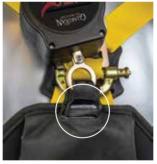

Intact indicator stitching - OK to use.



Broken/damaged indicator stitching - Immediately remove from service!



GUARDIAN

Inspection Log

Date of First Use: _____

Product lifetime is indefinite, as long as it passes pre-use and Competent Person inspections. User must inspect prior to EACH use. Competent Person other than user must complete formal inspection at least every 12 months. Competent Person to inspect and initial.

This inspection log must be specific to one Diablo 2.5 Cable Tie-Back SRL-LE. Separate inspection logs must be used for each Diablo 2.5 Cable Tie-Back SRL-LE. All inspection records must be made visible and available to all users at all times.

	J	F	\mathbf{M}	A	Μ	J	J	A	S	0	Ν	D
YR												
YR												
YR												
YR												
YR												

If equipment fails inspection IMMEDIATELY REMOVE FROM SERVICE.





Safety Information



Failure to understand and comply with safety regulations may result in serious injury or death. Regulations included herein are not all-inclusive, are for reference only, and are not intended to replace a Competent Person's judgment or knowledge of federal or state standards.

Do not alter equipment. Do not misuse equipment.

Workplace conditions, including, but not limited to, flame, corrosive chemicals, electrical shock, sharp objects, machinery, abrasive substances, weather conditions, and uneven surfaces, must be assessed by a Competent Person before fall protection equipment is selected.

The analysis of the workplace must anticipate where workers will be performing their duties, the routes they will take to reach their work, and the potential and existing fall hazards they may be exposed to. Fall protection equipment must be chosen by a Competent Person. Selections must account for all potential hazardous workplace conditions. All fall protection equipment should be purchased new and in an unused condition.

Fall protection systems must be selected and installed under the supervision of a Competent Person, and used in a compliant manner. Fall protection systems must be designed in a manner compliant with all federal, state, and safety regulations. Forces applied to anchors must be calculated by a Competent Person.

Unless explicitly stated otherwise, the maximum allowable free fall distance for lanyards must not exceed 6'. No free fall allowed for non-LE SRLs. Class A SRLs must arrest falls within 24"; Class B SRLs must arrest falls within 54".

Harnesses and connectors selected must be compliant with manufacturer's instructions, and must be of compatible size and configuration. Snap hooks, carabiners, and other connectors must be selected and applied in a compatible fashion. All risk of disengagement must be eliminated. All snap hooks and carabiners must be self-locking and self-closing, and must never be connected to each other.

A pre-planned rescue procedure in the case of a fall is required. The rescue plan must be project-specific. The rescue plan must allow for employees to rescue themselves, or provide an alternative means for their prompt rescue. Store rescue equipment in an easily accessible and clearly marked area.

Training of Authorized Persons to correctly erect, disassemble, inspect, maintain, store, and use equipment must be provided by a Competent Person. Training must include the ability to recognize fall hazards, minimize the likelihood of fall hazards, and the correct use of personal fall arrest systems.

NEVER use fall protection equipment of any kind to hang, lift, support, or hoist tools or equipment, unless explicitly certified for such use.

Equipment subjected to forces of fall arrest must immediately be removed from use.

Age, fitness, and health conditions can seriously affect the worker should a fall occur. Consult a doctor if there is any reason to doubt a user's ability to withstand and safely absorb fall arrest forces or perform set-up of equipment. Pregnant women and minors must not use this equipment.

Physical harm may still occur even if fall safety equipment functions correctly. Sustained post-fall suspension may result in serious injury or death. Use trauma relief straps to reduce the effects of suspension trauma.



Labels





STEEL SH MOUSQUETON EN ACIER / GANCHO DE SEGURIDAD DE ACERO 11108

Lot #

de lote

do lot

11108

Serial #	
# de Série	
# de Série	

Mfg. Date Fecha de Fabricación Date de Fabrication

WARNING: Prior to use, fully read and understand all manufacturer's instructions provided with equipment at time of shipment.

DO NOT ATTEMPT TO SELF SERVICE OR REPAIR! DO NOT REMOVE THIS LABEL.

USE: This device is only for use by one person as a fall arrester. Only make connections directly to attachment point on safety harness. Ensure that connection to anchorage is secured properly before use. Avoid lifeline contact with thermal, electrical, and chemical hazards. Lifeline may contact sharp or abrasive edges and surfaces, but avoid if possible. May be used as a component of a PFAS in HLL applications. Design, installation, and utilization of HLLs must be supervised by a Qualified Person. Suitable for horizontal use. Competent Person must calculate fall clearance prior to use; fall clearance calculations must include considerations for swing fall. Clearance numbers specified based on lifeline installed vertically overhead and in-line with worker



Assembled in USA 91122 (Rev. B) INSPECTION: Prior to each use, inspect device per instructions, including locking function (sharp pull to test), retraction function, legibility of labels, evidence of defects, damage, or missing parts, and condition of connectors, housing, fasteners, and lifeline (inspect full length). Inspection by Competent Person required at least every 12 months. Immediately remove from service if evidence of shock pack deployment is found.

SPECIFICATIONS:

Lifeline: 8' Galvanized Steel Cable, 3/16" Tie-Back Webbing: 3', 1" Width Average arresting force: 900 lbs.

(LE Use):

Capacity range: 130 - 310 lbs. Min. setback distance from edge: 0' Max. arresting distance: 54" - 102" Free fall: 5' max. Min. fall clearance: 13' - 17'

willi. Tall clearance. 15 - 1

(Non-LE Use): Capacity range: 130 - 420 lbs. Max. arresting distance: 54" Free fall: 2' max. Min. fall clearance: 9' Class B SRL